 

 
 
 






Thank you for choosing Sevenoak and congratulations on your purchase of the Sevenoak SK-R01 Shoulder Support Rig.

The Sevenoak Shoulder Support Rig is a compact camera stabilization rig that uses a comfortable foam padded shoulder pad mount and a hand grip to help you support your camera and keep it steady when shooting video. The SK-R01 reduces muscle fatigue, while eliminating distracting camera movement for smoother, more professional-looking movies. It can support cameras weighing up to 5.5 pounds.

The SK-R01 is height-adjustable and can be used on the left or the right shoulder, with a hand grip that's detachable and can be used as a stand-alone support for lightweight cameras. The SK-R01 weighs just 2.25 pounds.

Components

-  Stainless steel shoulder mount frame
-  Foam shoulder pad
-  Removable hand grip
-  Camera baseplate
-  Shoulder pad mounting plate with two Allen screws (+1 spare)
-  Shoulder mount frame mounting plate with one screw
-  Baseplate mounting plate with one screw
-  Camera mounting screw
-  Allen wrench

Warnings

- Please read and follow these instructions, and keep this manual in a safe place.
- Handle the unit with care.
- Clean the unit with a soft, dry cloth.
- Use only parts provided by the manufacturer.
- Make sure everything is secure before proceeding.
- Make sure the item is intact and that there are no missing parts.
- Do not exceed the maximum load capacity.
- All photos are for illustrative purposes only.

Limited one-year Warranty

Sevenoak provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement (the "Warranty Period"), whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use.

To obtain warranty coverage during the Warranty Period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective Product along with proof of purchase and the RMA number.

This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, SEVENOAK MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.

SEVENOAK
SK-R01




Shoulder Support Rig


The SK-R01 Shoulder Support Video Stabilizer is a support that features two-point Stabilization using a shoulder mount and a hand grip.

Mounting the camera


1. Install the shoulder pad mounting plate on to the shoulder pad using the two included Allen screws and the included Allen wrench. If the SK-R01 will be on the right shoulder, place the plate so that the long part of the plate extends to the right of the screws. If the left shoulder will be holding the support, the long part of the plate should extend to the left of the screws.

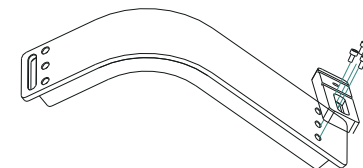


2. Attach the shoulder mount frame to the shoulder pad using the shoulder mount frame mounting plate and the included shoulder mount frame mounting plate screw. With the screw in place, you can adjust the vertical height of the rig by loosening the screw slightly and moving the shoulder mount frame up or down until it's at the desired height. Then tighten the mounting screw securely. Do not over-tighten.

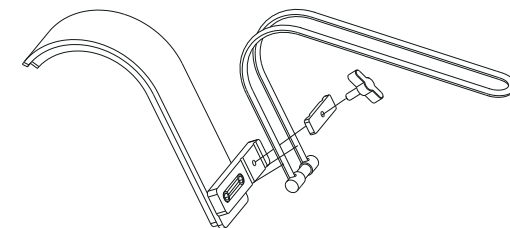


3. Attach the camera baseplate to the shoulder mount frame using the baseplate mounting plate and the baseplate mounting plate screw. After the baseplate is mounted to the shoulder mount frame, you can adjust the baseplate by loosening the screw and sliding the baseplate forwards or back. When the baseplate is in the correct position, tighten the mounting screw securely. Do not over-tighten.

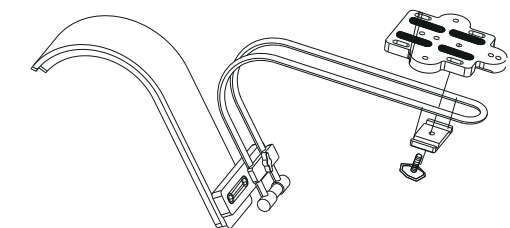


4. Mount the hand grip to the shoulder mount frame by screwing the end of the hand grip into the hole provided at the end of the camera baseplate. Align the hand grip correctly to the hole, which is angled slightly. Tighten the hand grip securely.

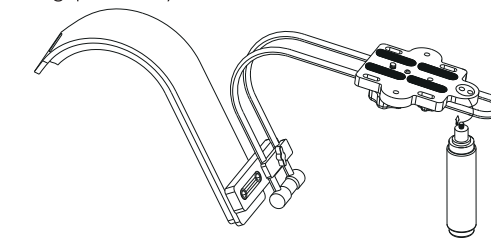


5. Screw the camera mounting screw into the camera baseplate using one of the holes provided.

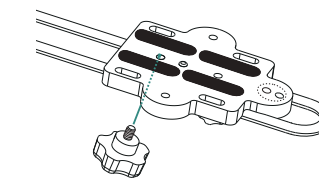


6. Attach the camera to the baseplate using the camera mounting screw. Tighten securely.

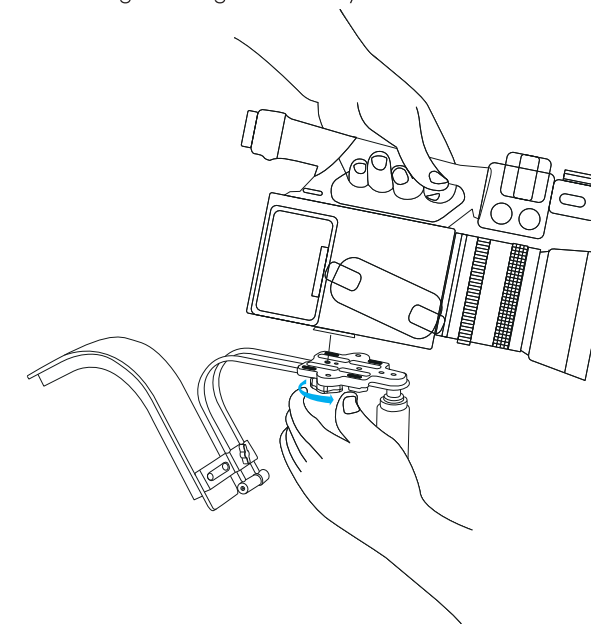

7. Adjust the distance of the camera from your eye by loosening the baseplate mounting screw slightly and sliding the camera forward or back to the desired position. Tighten the screw securely. Do not over-tighten.

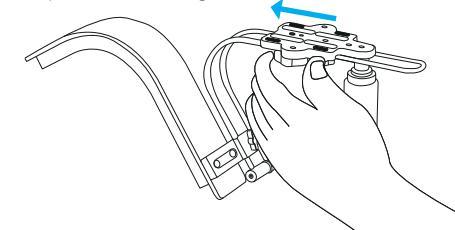

8. To adjust the vertical position of the camera, loosen the shoulder mount frame mounting plate screw and slide the shoulder mount frame up or down to the desired position. Tighten the screw securely. Do not over-tighten.

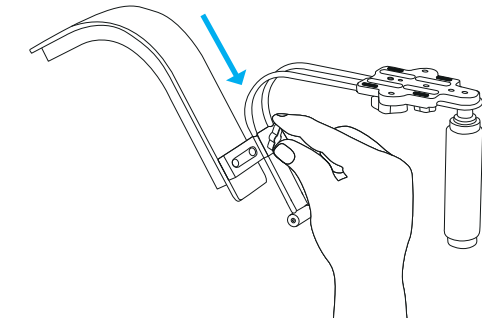

When you're finished shooting, remove the camera from the shoulder mount.

- Slots on end of the shoulder pad may be used for additional accessories such as counterweights and shoulder straps.
- Hand grip may be used as a standalone grip for smaller cameras.
- Threaded holes in camera baseplate may be used to mount accessories with the use of brackets.

